 
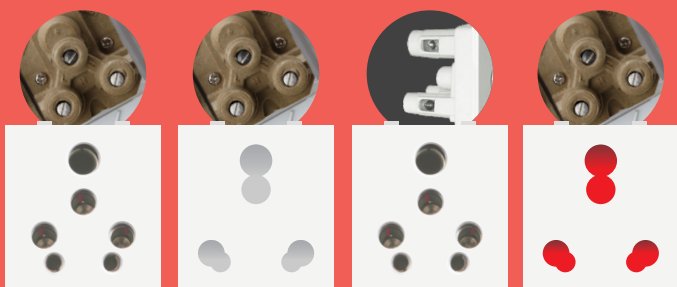 
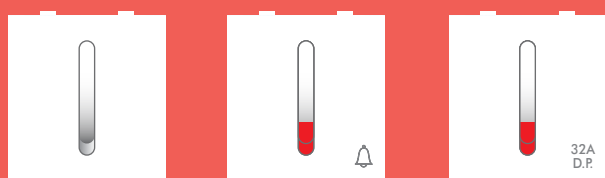 


Product

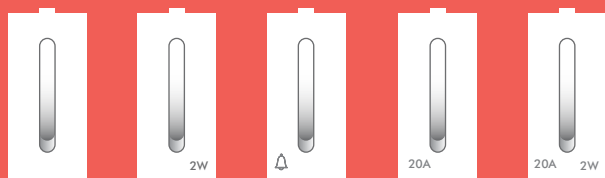

Code

Description

6A. / 16A. / 25A. **CROMEX** SWITCHES 1M

CR01	6A. 1 WAY SWITCH
CR02	6A. 2 WAY SWITCH
CR03	6A. BELL PUSH SWITCH
CR04	16A. 1 WAY SWITCH
CR05	16A. 2 WAY SWITCH
CR06	25A. 1 WAY SWITCH

6A. / 16A. / 32A. **CHROMEX** SWITCHES 2M

CL07	6A. 1 WAY SWITCH
CL08	6A. 2 WAY SWITCH
CL09	6A. BELL PUSH SWITCH WITH INDI.
CL10	16A. 1 WAY SWITCH
CL11	16A. 2 WAY SWITCH
CL12	16A. 1 WAY SWITCH WITH INDI.
CL13	32A. D.P. SWITCH WITH INDICATOR

SUPPORTING ACCESSORIES

SA01	NEON INDICATOR
SA02	10A. KIT KAT FUSE
SA03	BLANK PLATE
SA04	RJ11 2 LINE TEL. JACK
SA05	T.V. SOCKET

6A. / 10A. SOCKETS

SO01	10A. 2 PIN SOCKET
SO02	10A. 3 PIN SOCKET
SO03	10A. 2-IN-1 SOCKET (INDIAN PIN)
SO04	13A. SOCKET (INTEL PIN)
SO05	10/20A. UNI. SOCKET (WI. SHUTTER)
SO06	25A. UNI. SOCKET PORCELAIN BASE

20A. / 25A. SOCKETS

SO07	P.C.10/20A. UNI. SOCKET (WI. SHUTTER)
SO08	20A. UNI. SOC. PORCELAIN (WI. SHUTTER)
SO09	16A. UNI. SOCKET (WI. SHUTTER)

S.P. & D.P. TRIPPER / USB CHARGER

TU	6A. TO 32A. S.P. MCB TRIPPER
GL16	6A. TO 40A. D.P. MCB TRIPPER
GL17	2.5A. USB CHARGER WITH NEON
GL18	2.5A. USB CHARGER C PIN TYPE